



critterion® adjust the critterion chair to fit you

Tilt tension

Turn knob toward left side of chair to increase tension.

Height-width pivot-arms*

Squeeze trigger to raise or lower armrest. Grip arm caps to slide width in/out and to pivot.

Seat angle

Lift paddle and shift your weight to tilt seat forward or back.

Variable back stop

Hold switch forward while you lean back. Release to set maximum recline angle. To restore full tilt, release switch when fully reclined.

Seat depth*

Lift paddle and slide seat forward or back.

Seat height

Lift paddle to raise or lower seat height.

Back height

While seated, pull handle toward you and raise or lower. (You may need your other hand to help move backrest.)

Foot ring height* (stool only)

Lift ring and rotate counterclockwise, raise or lower, then turn clockwise to lock.

*Optional features (may not be included on your chair).

For French and Spanish versions visit www.steelcase.com.